



Product #574662  
Instruction #700101

# HANDY REST NXT

Assembly & Usage  
Instructions



## STOP!

If you have a problem with this product, **DON'T RETURN IT TO THE STORE WHERE YOU PURCHASED IT.** Contact customer service at...

**Battenfeld**  
Technologies, Inc.

5885 West Van Horn Tavern Road / Columbia, MO 65203  
573-445-9200 / Email: [sales@battenfeldtechnologies.com](mailto:sales@battenfeldtechnologies.com)  
Or visit our website @ [www.battenfeldtechnologies.com](http://www.battenfeldtechnologies.com)


**NOT WARRANTED AGAINST MISUSE, ABUSE, OR COMMERCIAL USE.**

### Limited Warranty

Every Caldwell product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Caldwell will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with our Instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Caldwell, its affiliates, and its vendors from all other obligations and liabilities.


**Thank you for purchasing a Caldwell Handy Rest NXT shooting rest.**

Please take a moment to locate all of the parts shown in **Photo I**. Unpack your rest components onto a level work surface. The only tool you will need to completely assemble your new Handy Rest NXT is a Phillips screwdriver.

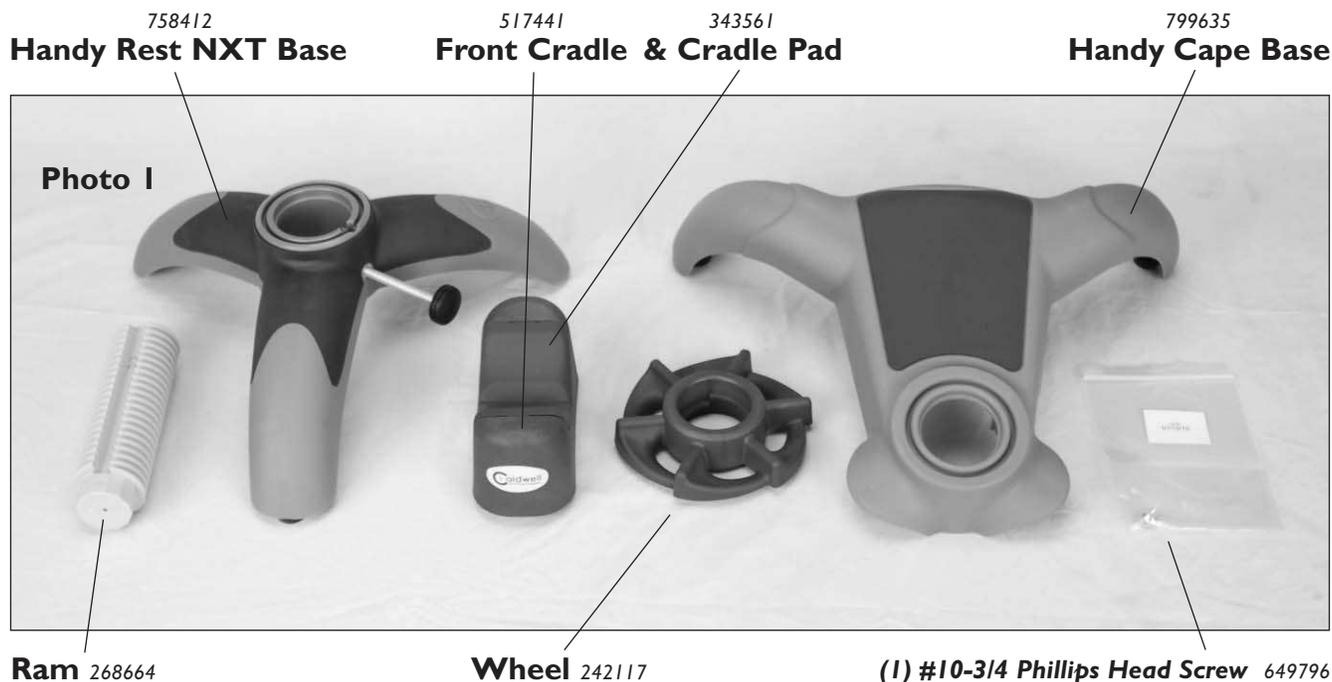

## Assembly Instructions


1. Thread the wheel approximately half way onto the ram as shown in **Photo 2**.

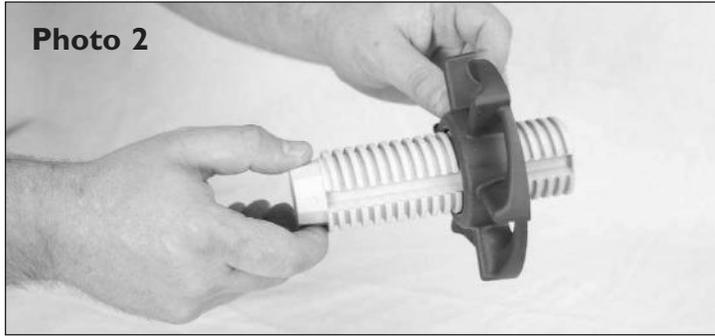


2. Turn the thumbscrew counterclockwise and far enough to install the ram and assembly into the base. Fully install the ram and wheel assembly, allowing the wheel to rest into the base. Secure the ram and wheel assembly into position using the thumbscrew. See **Photo 3**.



3. The cradle pad has been installed onto the front cradle for quality control purposes. Remove the cradle pad by depressing the two outer tabs on the underside of the front cradle. Keep the pad handy, it will be permanently installed in our next step. See **Photo 4**.

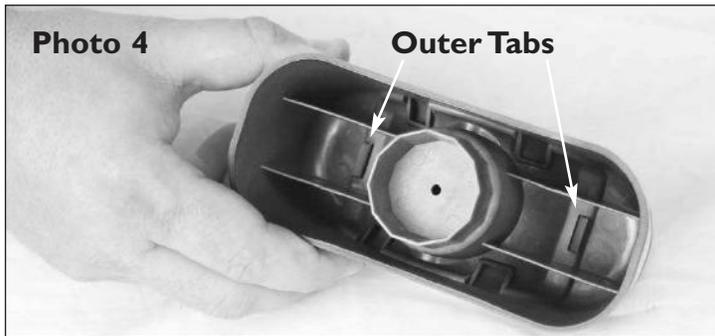

4. Orient and place the front cradle onto the ram as shown in **Photo 5**. Fasten the cradle to the ram using the 3/4" screw. Be careful not to over-tighten the screw. Then replace the cradle pad as shown in **Photos 6 and 7**.

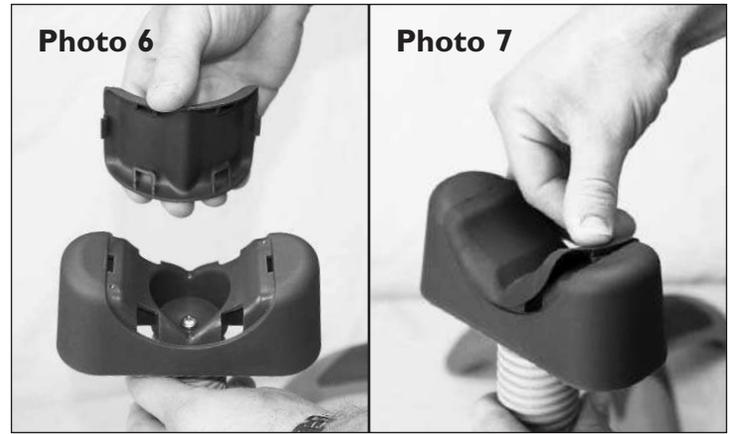

## Usage Instructions

Adjust the front cradle position to a comfortable shooting height by performing the following steps:

1. Loosen the ram thumbscrew tension knob
2. Adjust the front cradle height to a comfortable height by turning the wheel
3. Tighten the thumbscrew

## Optional: Completing the base and cape assembly for pistol use

Thread the 3" ram lock knob partially into the base. Assemble the cape to the base by aligning the long protrusion on the cape with the hole in the top of the base as shown in photo 7A. Insert the front cradle, ram and wheel assembly into the cape and base (7B). To lock the cape down against the base tightly, first adjust the front cradle assembly to the correct height required for comfortably shooting your pistol. Next, thread the 3" ram lock knob in against the ram to hold it securely in place. Lastly, turn the wheel clockwise to draw the cape down against the base.

