

ACTION CAMERA Pic Rail Mount


Film your hunt, practice or day out with friends using your favorite Action Camera and this Pic Rail Mount. Just attach the Pic Rail Mount to any Rifle, Crossbow, Shotgun, or Pistol with a Picatinny Rail. Easily positionable and detachable, the Pic Rail Mount gives you the "On The Go" freedom to mount and use your Action Camera quickly and effectively. Once the rail mount is attached, the camera bracket can be put on at any time you wish.



Quick detach mount allows Action Camera to instantly be mounted or removed from the rifle for carrying or transport

Custom, extended length Action Camera mounting screw for easy adjustment even with heavy gloves

Can be used off the right or left side of the gun!

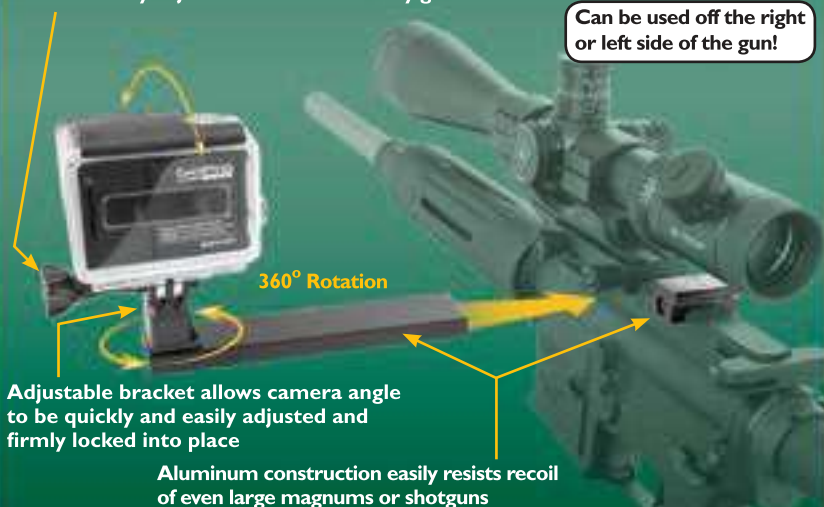

Adjustable bracket allows camera angle to be quickly and easily adjusted and firmly locked into place

Aluminum construction easily resists recoil of even large magnums or shotguns

Product #123905



Caldwell
Shooting Supplies

WARNING:

This Product May Contain A Chemical Known To The State Of California To Cause Cancer, Or Birth Defects Or Other Reproductive Harm.

A **Battenfeld** Product
2501 LeMone Industrial Blvd.
Columbia, MO 65201
www.caldwellshooting.com

Insert #1046478 Rev.A
Made In China

GOPRO, HERO, the GOPRO logo, and the GoPro Be a Hero logo are trademarks or registered trademarks of GoPro, Inc.

Caldwell® ACTION CAMERA Pic Rail Mount

Mount your Action Camera to your rifle for unique action footage or turn it around for third-person perspective shots. Made of Aluminum, this mount easily resists recoil and secures your Action Camera for stable filming.

• Works with the **GoPro®** Hero [2, 3, 3+, or 4] camera



• Quick detach mount allows Action Camera to instantly be mounted or removed from the rifle for carrying or transport

Action Camera Pic Rail Mount INSTRUCTIONS

STOP!

If you have a problem with this product, **DON'T RETURN IT TO THE STORE WHERE YOU PURCHASED IT.** Contact customer service at...

Battenfeld
Technologies, Inc.

 
2501 LeMone Industrial Blvd. / Columbia, MO 65201
573-445-9200 / Email: sales@battenfeldtechnologies.com
Or visit our website @ www.BTIbrands.com

NOT WARRANTED AGAINST MISUSE, ABUSE, OR COMMERCIAL USE.

Limited Warranty


Every Caldwell product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Caldwell will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with our Instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Caldwell, its affiliates, and its vendors from all other obligations and liabilities.

1. Install the Pic Rail Mount on the gun. It can be positioned anywhere on a Pic Rail.

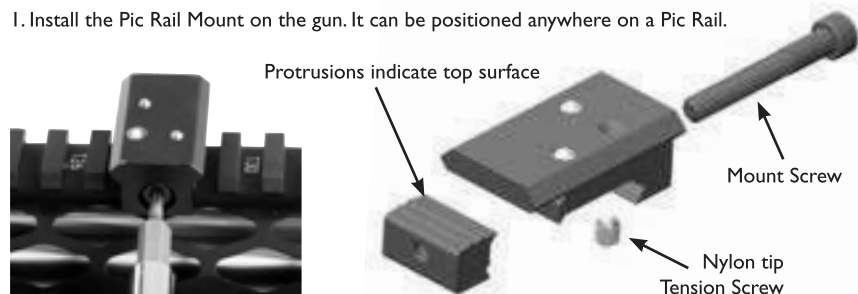

2. Tighten mount screw to approx 20-25 inch pounds. If desired, low-strength thread locking compound may be used
3. Attach the camera mount to the Bar using the 1/4-20 x 3/8" screw provided as shown. Use a straight-bladed screwdriver or a coin to tighten the screw firmly.

NOTE: The camera mount can be installed in either direction based on which side of the rifle the Bar will be placed.

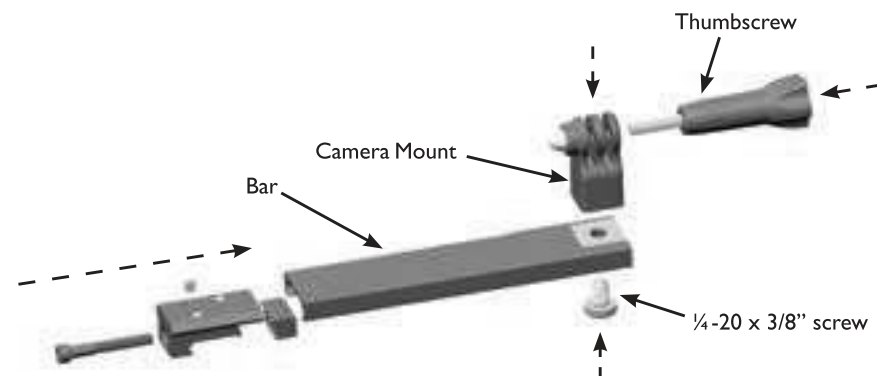


ADJUSTING THE TENSION SCREW:

There may be a slight amount of movement between the Pic Rail Mount and the Bar. While this will not affect the video quality, the movement can be easily removed by adjusting the nylon-tipped tension screw with the provided 2mm hex wrench.

1. Remove the Pic Rail Mount from the gun and assemble it with the Bar as shown.

2. Use the provided wrench to lightly tighten the tension screw against the Bar. Make sure that the Bar can still be removed and installed on the Mount. (A light coating of grease between the Mount and Bar may be desired)

3. Replace the Mount on the Picatinny rail and firmly tighten with the provided T15 wrench.

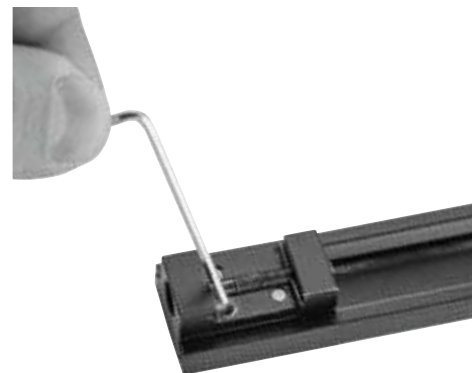

NOTE: The nylon tip on the screw may wear slightly over time. If this occurs, simply remove the mount and readjust it.

NOTE: The screw is captured when the Bar is installed. However, excessive shooting without the Bar installed could cause the screw to vibrate loose. To prevent this, a low-strength thread-locking adhesive can be used. If the screw is lost, it may be replaced by any M4x0.7 nylon-tipped set screw.

INSTALL CAMERA ONTO MOUNT

1. Install the camera into the mount by removing the thumbscrew and aligning the camera bracket into the slots on the mount.
2. Replace the thumbscrew and tighten it hand tight only to lock the Camera into position.

INSTALL CAMERA ADAPTER ONTO PIC RAIL MOUNT

1. With the camera attached to the Bar, slide the end of the bar onto the Pic Rail Mount as shown.
2. There are two spring detents that prevent the Bar from coming off in use. Slide the Bar onto the mount until you feel these detents "snap" into place. The adapter can be quickly and easily removed by simply pulling the Bar off the mount.

